



How to Order Valves

Plug-in **VQC4** **1** **0** **0** **-** **-** **-** **1** **-** **-** **-**

Type of actuation

1	2-position single (A)(B) 	3	3-position closed center (A)(B)
	2-position double (A)(B) 		3-position exhaust center (A)(B)
2	2-position double (A)(B) 	4	3-position pressure center (A)(B)
	2-position double (A)(B) 		3-position double check (A)(B)

Note) For double check type, refer to page 478 of the VQ4000/5000 series.

Thread type

NII	Rc
N	NPT
T	NPTF
F	G

Port size

NII	Without sub-plate (For manifold)
02	1/4
03	3/8

Porting specifications

NII	Side ported
B	Bottom ported

Manual override

NII: Non-locking push type (Tool required)

B: Locking type (Tool required)

C: Locking type (Manual)

Light/Surge voltage suppressor

NII	Yes
E	Without light, with surge voltage suppressor

Coil voltage

5	24 VDC
6	12 VDC

Body

0: Plug-in sub-plate

Seal

0	Metal seal
1	Rubber seal

Function

NII (Note 1)	Standard (0.95 W)
Y	Low wattage type (0.4 W)
R (Note 2)	External pilot

Note 1) When the power is energized continuously, refer to "Specific Product Precautions 1" on page 642.
 Note 2) For details about external pilot type, refer to page 481 of the VQ4000/5000 series. In addition, external pilot type cannot be combined with a double check spacer.
 Note 3) When multiple symbols are specified, indicate them alphabetically.



How to Order Sub-plates

VQ4000 - PW - **02** **-** **-** **-**

Porting specifications

NII	Side ported
B	Bottom ported (Note)

Port size

02	1/4
03	3/8

Note) For bottom ported, port size is 1/4 only.

Thread type

NII	Rc
N	NPT
T	NPTF
F	G

CE-compliant

NII	-
Q	CE-compliant

Replacement of pilot valve assembly (Voltage)

- Refer to page 640 for pilot valve assembly part numbers.
- Refer to page 643 for replacement method.