

Replacement Parts: ZPT Series Adapter


Appropriate adaptor or buffer can be selected for the currently used pad model.

● Without buffer


— The same symbol

◀..... Replacement of the symbol

[Pad model no.]

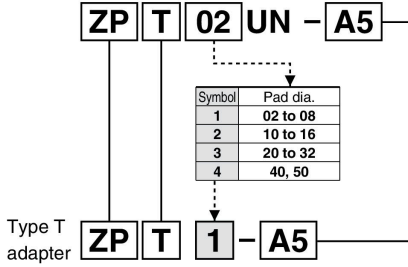

Construction

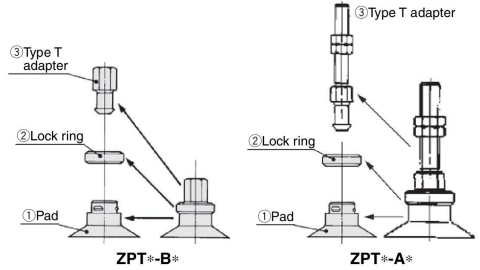

Applicable pad diameter: $\phi 2$ to $\phi 8$
 2 x 4, 3.5 x 7, 4 x 10
 $\phi 10$ to $\phi 16$ (Thin section series)

| Model | ①Pad | ②Lock ring | ③Type T adapter |
|--------------|---------|------------|-----------------|
| ZPT▲▲□***-A5 | ZP▲▲□** | — | ZPT1-A5 |
| ZPT▲▲□***-A6 | | | ZPT1-A6 |
| ZPT▲▲□***-B4 | | | ZPT1-B4 |
| ZPT▲▲□***-B5 | | | ZPT1-B5 |

Note 1) Applicable pad diameter (▲▲): 02, 04, 06, 08, 10, 13, 16, 2004, 3507, 4010

Note 2) Applicable pad form (□): U, C, B, UT, CT

Applicable pad diameter: $\phi 10$ to $\phi 16$

| Model | ①Pad | ②Lock ring | ③Type T adapter |
|---------------|--------------|------------|-----------------|
| ZPT▲▲□***-A5 | ZP▲▲□***-X19 | ZPL1 | ZPT2-A5 |
| ZPT▲▲□***-A6 | | | ZPT2-A6 |
| ZPT▲▲□***-B5 | | | ZPT2-B5 |
| ZPT▲▲□***-B6 | | | ZPT2-B6 |
| ZPT▲▲□***-◇01 | | | ZPT2-◇01 |

Note 1) Applicable pad diameter (▲▲): 10, 13, 16

Note 2) Applicable pad form (□): U, C, D, B

Note 3) Vacuum entry port (◇): B, N, T

Applicable pad diameter: $\phi 20$ to $\phi 32$

| Model | ①Pad | ②Lock ring | ③Type T adapter |
|---------------|--------------|------------|-----------------|
| ZPT▲▲□***-A6 | ZP▲▲□***-X19 | ZPL2 | ZPT3-A6 |
| ZPT▲▲□***-A8 | | | ZPT3-A8 |
| ZPT▲▲□***-B5 | | | ZPT3-B5 |
| ZPT▲▲□***-B6 | | | ZPT3-B6 |
| ZPT▲▲□***-B8 | | | ZPT3-B8 |
| ZPT▲▲□***-◇01 | | | ZPT3-◇01 |

Note 1) Applicable pad diameter (▲▲): 20, 25, 32

Note 2) Applicable pad form (□): U, C, D, B

Note 3) Vacuum entry port (◇): B, N, T

Applicable pad diameter: $\phi 40$, $\phi 50$

| Model | ①Pad | ②Lock ring | ③Type T adapter |
|---------------|--------------|------------|-----------------|
| ZPT▲▲□***-A6 | ZP▲▲□***-X19 | ZPL3 | ZPT4-A6 |
| ZPT▲▲□***-A8 | | | ZPT4-A8 |
| ZPT▲▲□***-B6 | | | ZPT4-B6 |
| ZPT▲▲□***-B8 | | | ZPT4-B8 |
| ZPT▲▲□***-◇01 | | | ZPT4-◇01 |

Note 1) Applicable pad diameter (▲▲): 40, 50

Note 2) Applicable pad form (□): U, C, D, B

Note 3) Vacuum entry port (◇): B, N, T