


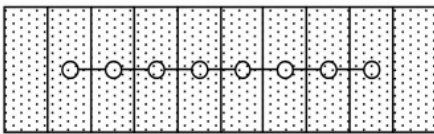
ATEX Terminal & Cross-Connector Arrangements :

Manually cut cross connections and cross connections with blank ends (ZQV's > 20 poles) are excluded.


- A Continuous
- C Adjacent – separated by a partition plate
- D Intermediate - bridging one or more unconnected terminals (e.g. every 3rd terminal)
- E Next to a protective conductor terminal (earth) without a partition plate
- F Next to a protective conductor terminal (earth) with a partition plate
- G Bridging a protective conductor terminal (earth)
- H Twin parallel
- I Triple parallel

 Terminal blocks marked with this pattern are limited to the maximum voltage of arrangement A.

A Continuous




Next to a protective conductor terminal (earth) separated

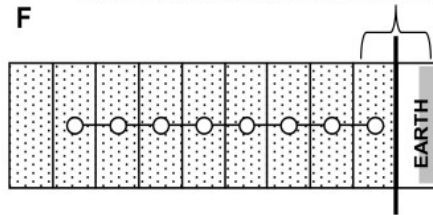


Adjacent – separated by a partition plate
case C voltage between left and right block


C

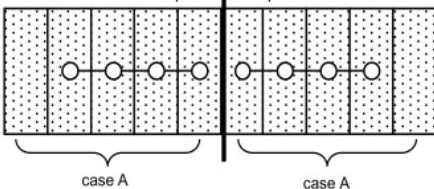


G Bridging a protective conductor terminal (earth)

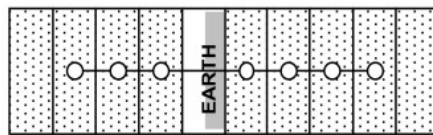


D Intermediate - bridging one or more unconnected terminals

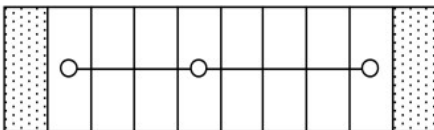



H Twin parallel.

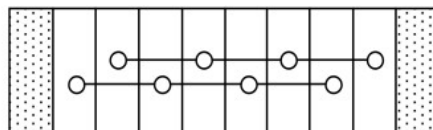


E Next to a protective conductor terminal (earth) without a partition plate

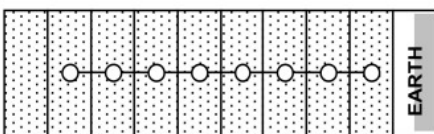

I Triple parallel.

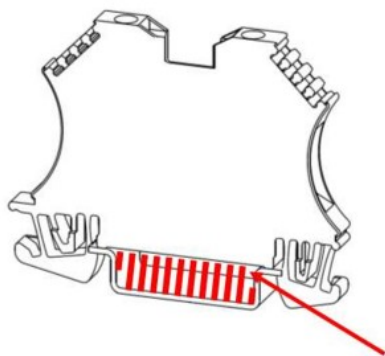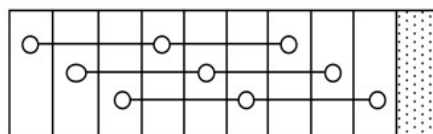

Assembly Note:

The given voltage values are only valid if the area inside the terminal rail is free (see marking ). E.g. fixing screws are not permitted in this area.