
How to Order Valves




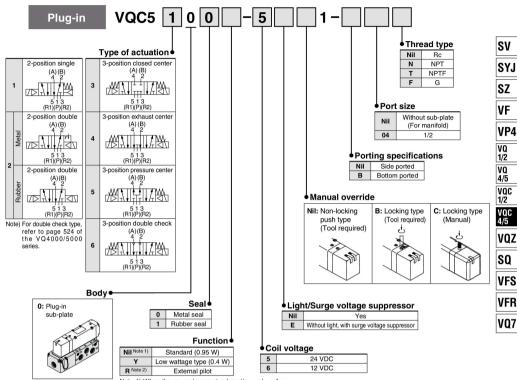

Note 1) When the power is energized continuously, refer to "Specific Product Precautions 1" on page 680.

Note 2) For details about external pilot type, refer to page 527 of the VQ4000/5000 series. In addition, external pilot type cannot be combined with a double check spacer.

Note 3) When multiple symbols are specified, indicate them alphabetically.

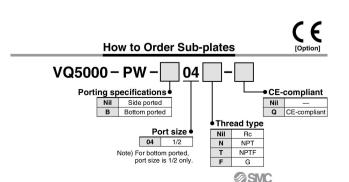

Replacement of pilot valve assembly (Voltage) Refer to page 678 for pilot valve assembly

part numbers.
Refer to page 681 for replacement method.