
4/5 Port Air Operated Valve

SYJA5000 Series

How to Order

 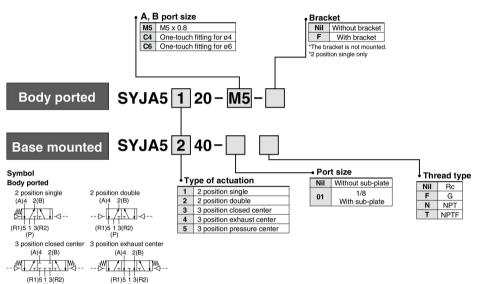


How to Order Manifold Base

Same manifolds as SYJ5000 series are prepared.

SS5YJA5 - Fill the same as SS5YJ5. (Refer to page 194.)

Instruct by specifying the valves and blanking plate assembly to be mounted on the manifold along with the manifold base model no.



(B)2 4(A)

The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

(R)3 1 (P)

3 position pressure center
(A)4 2(B)

2 position double

3 position closed center 3 position exhaust center

(R)3 1

(R)3

(B)2 4(A)

(P)

(R1)5 1 3(R2) (P)

Base mounted 2 position single

(B)2 4(A)

(R)3 1

(R)3 1

(P)

(B)2 4(A)

(P)

3 position pressure center

Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 3 to 9 for 3/4/5 Port Solenoid Valve Precautions. SYJA

VZA

SYA

VFA

VFRA

VPA4 SYJA

VZA

VTA

VGA

VPA VPA3