




## BP-S • BP30FS



### BEARING PULLER SET

#### ► Features

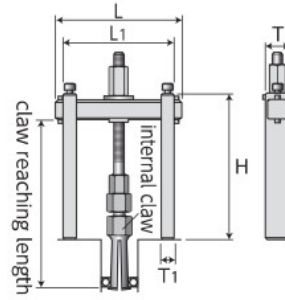

- Dedicated tool set for removing bearings from inner rings.
- Chuck the internal claw on the bearing internal diameter, set on the stand and then the bearing can be removed just by turning the nut.

- 1) Insert the internal claw matching with the bearing internal diameter at the bottom of the bearing, tighten the adjustment screw and set so that the internal claw is firmly hooked to the bottom of the bearing. (Fig.1)
- 2) Connect and fix the lower part of the standing puller forcing screw to the adjustment screw. (Fig.2)
- 3) Fix the hex. part of the forcing screw lower part with a spanner, tighten the nut and remove the bearing. (Fig.2)

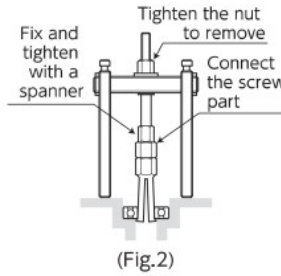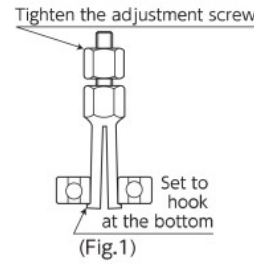

#### ► Example of use



Item No.	Applicable bearing (internal diameter)	Size (mm)							Set N.W. (kg)
		L	L1	T	T1	H	Claw reaching length		
BP15S	φ8, φ10, φ12, φ15	100	42~88	20	10	120	Max.150	1.5	
BP30S	φ17, φ20, φ25, φ30	110	47~98	25	10	130	Max.150	2	
BP30FS	φ8, φ10, φ12, φ15, φ17, φ20, φ25, φ30	Set of the 2 items above							3.8

Gear pullers (2-claw type)

Gear pullers (auto-grip, G type)

Gear pullers (3-claw type)

Shock speed pullers

Sliding gear pullers

Bearing pullers, bearing puller sets



Bearing insertion tool sets

Hydraulic pullers, power pushers

Accessories

## BPS • BJ

### BEARING PULLER SET Parts

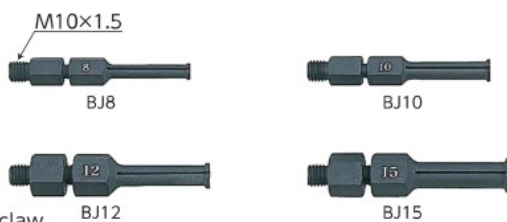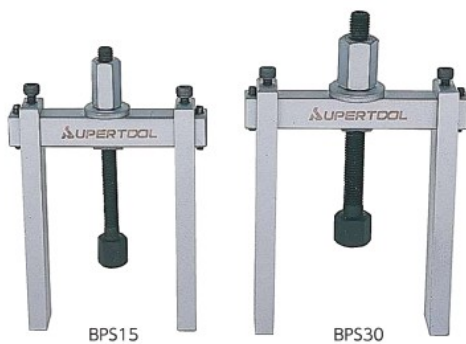

#### ■ Stand set

Item No.	Applicable internal claw
BPS15	BJ 8~15
BPS30	BJ17~30

#### ■ Internal claw

Item No.	Applicable stand	Applicable bearing (internal diameter) (mm)
BJ8	BPS15	φ8
BJ10	BPS15	φ10
BJ12	BPS15	φ12
BJ15	BPS15	φ15

Item No.	Applicable stand	Applicable bearing (internal diameter) (mm)
BJ17	BPS30	φ17
BJ20	BPS30	φ20
BJ25	BPS30	φ25
BJ30	BPS30	φ30