

A) Insert the internal claw onto the bearing.
 B) Fix the internal claw cap and tighten the adjustment screw.
 * The adjustment screw gets pulled out, the internal claw tips open, hook the bearing bottom part and hold the bearing, as shown on Fig. B).

BH32

SLIDE HAMMER BEARING PULLER SET (Heavy Duty Type for Professional Use)

Features

- Dedicated tool set for removing bearings from inner rings.
- Steel case as standard acc.

Example of use



Set item No.	Item name	Item No.	Q'ty	Set N.W. (kg)
BH32	Slide hammer	BPH6	1 set	4.5
	Internal claw	BPJ0~4	5	

BP60

BEARING PULLER SET (Heavy Duty Type for Professional Use)

Features

- Dedicated tool set for removing bearings from inner and outer rings.
- Steel case as standard acc.

Set item No.	Item name	Item No.	Q'ty	Set N.W. (kg)
BP60	Slide hammer	BPH6	1 set	14
	Internal claw	BPJ0~7	8	
	Standing puller	BPS6	1	
	Opening stopper	BPU6	1	
	Single size offset wrench	BPM6	1	
	Hex key wrench	BPX4	1	


BPS • BPJ • BPH • BPSJ • BPU • BPM

BEARING PULLER SET Parts

Features

- Dedicated for removing outer ring by setting with the opening stopper (BPU6) for stable operation.
- H indicates the claw reaching length when the forcing screw is lifted to the highest point.

Standing puller

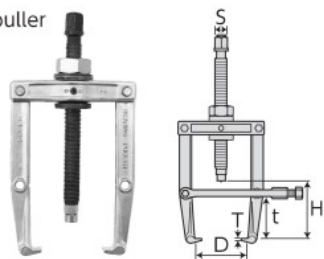

Example of use



Standing puller (outer ring removing ability table)

Item No.	Size (mm)						Breaking load (kN)
	D	t	H	T	S		
	Pulled object		Claw reaching length	Claw tip thickness	Forcing screw hex. width across flats		
BPS6	45~150	Max. 55	Max. 150	6	22	60	

Internal claw (inner ring removing ability table)

Item No.	Pulled object (mm)		Applicable bearing No.
	Dia. (internal dia.)	Width	
BPJ0	10.0~13.0	12	00-01
BPJ1	12.0~15.0	13	01-02
BPJ2	15.0~20.0	15	02-03-04
BPJ3	20.0~25.0	17	04-05

BPJ5 M15×1.5

Item No.	Pulled object (mm)		Applicable bearing No.
	Dia. (internal dia.)	Width	
BPJ4	25.0~32.0	20	05-06
BPJ5	34.5~41.5	23	07-08
BPJ6	44.0~51.0	27	09-10
BPJ7	55.0~60.0	31	11-12



Slide hammer

Item No.	Full length (mm)
BPH6	511



Standing puller claw (1 pc)

Item No.	Full length (mm)
BPSJ	222.8



Opening stopper

Item No.
BPU6



Offset wrench

Item No.
BPM6